


# VDD VOLUMETRIC CUP FEEDER

*Proven  
technology,  
high-  
performing  
and precise.*

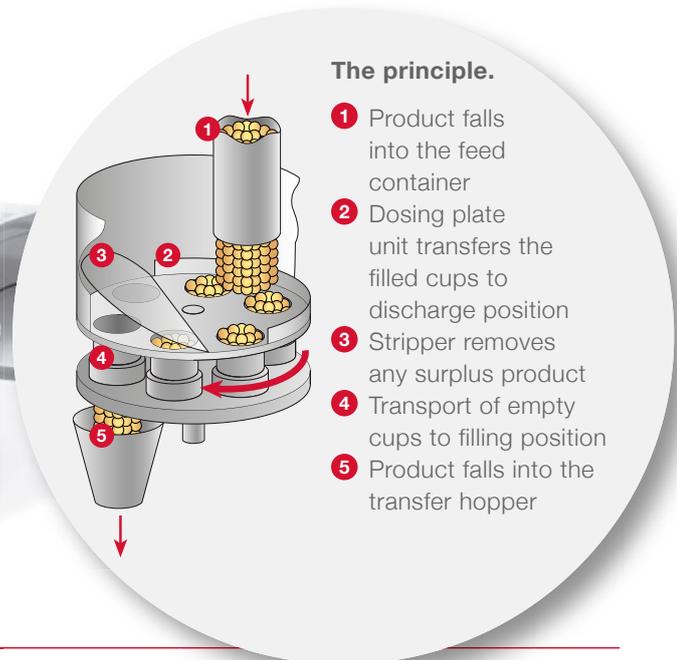

## HIGHLIGHTS

- High performance
- Proven dosing method
- Large volume range
- Product specific funnel design
- Adjustable, telescopic 2-piece dosing cups for volume control
- Height adjustment for adaptation to dosing volume
- Frequency-controlled drive

**ROVEMA**

Passion for packaging



---

# VDD VOLUMETRIC CUP FEEDER

---

Due to its high performance and proven technology the volumetric cup feeder VDD has been proven extremely reliable in operation.



It meets the demand of the user within the required legal standards of weight accuracy. The machines may be used as a single unit or in combination with a Form Fill Seal machine.

The VDD is designed to dose free-flowing products like pellets or granulates. Within this range a great number of products can be handled as, for example, rice, short-cut pasta, peanuts, pulse, chocolate or sugar.

## The dosing.

The dosing is a volumetric one, meaning that the dosing volume is set by a dosing cup. The adjustment of different volumes is given by a telescopic connection between top and bottom cup, thus the cells can be enlarged or reduced. In case of need the filling, dosing and discharging functions can be designed for continuous operation using a constant rotation (ideal for the VPK Form Fill Seal machines) or using an intermittent motion (ideal for the VPI Form Fill Seal machines). Product transfer design is always adapted individually to the product characteristics

## Benefits and advantages.

- Volumetric dosing technology has continuously been optimized throughout decades so that today's proven components offer a robust and reliable technology that operates almost maintenance and wear free – and – it is simple and quick to clean. This is why the VDD is firmly established in the market.
- ROVEMA's volumetric dosing system is consequently adapted to the needs of the product, always specifying

the construction and the used material for the feed container and dosing cups with regard to the product.

- The different design as a continuous or intermittent operating volume dosing system takes the various requirements of our customers for flexibility into account.
- Working with our customers means a continuous development of our machines in line with production requirements to achieve that out of this experience even most difficult products can be handled trouble-free and within narrow filling tolerances.
- The ROVEMA VDD can be used as a single unit or be combined with other machines as an integral part of ROVEMA system technology.

## The options.

Apart from the long-term experience with the volume dosing technology the strength of the VDD lies in the product adapted, optimised design of its dosing feeders.

- Cup sets in product specific execution (stainless steel, plastic)
- Programmable, motor cup height adjustment to adapt the dosing volumes
- Devices for gas flushing systems
- Aggregates for residual oxygen analyser
- Integrated tendency control
- Special stripper brushes
- Protective housing for dust-free dosing

Other options on request.



Sales partner and service center worldwide

 **ROVEMA**



ROVEMA GmbH  
Industriestrasse 1  
35463 Fernwald, Germany  
Phone: +49 (0)641/409-0  
info@rovema.de  
[www.rovema.com](http://www.rovema.com)